




## Outside Recess Frame


Inward Opening Windows

### For the Width:

1. Measure your window recess at the Top, Middle and Bottom and write these measurements down

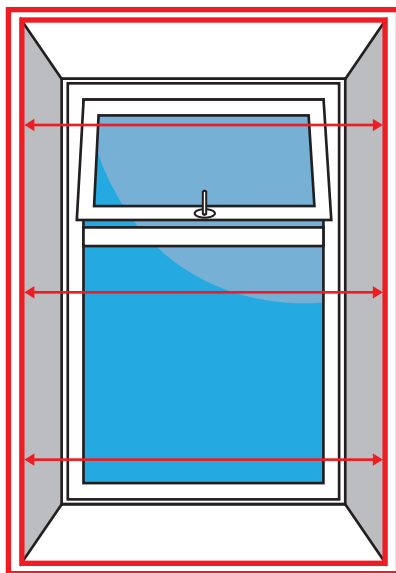

Full Height

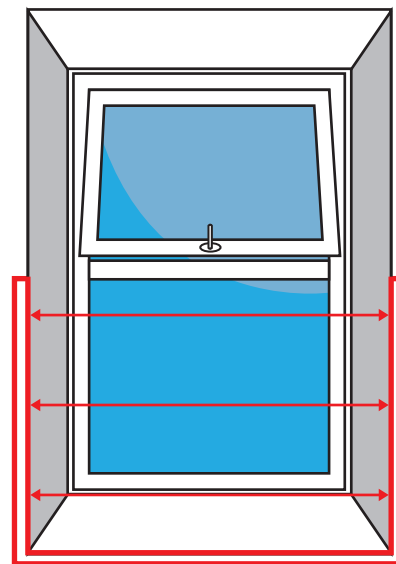

Cafe Style

2. Take the biggest measurement and **add 76mm**.  
This is to allow for the size of the frame Left and Right.

(This measurement will be the final measurement of the width when submitting your order)





## Outside Recess Frame

Inward Opening Windows

### For the Drop Measurement:

3. You will need to determine if yours will be fitted onto the window sill or outside of the window sill

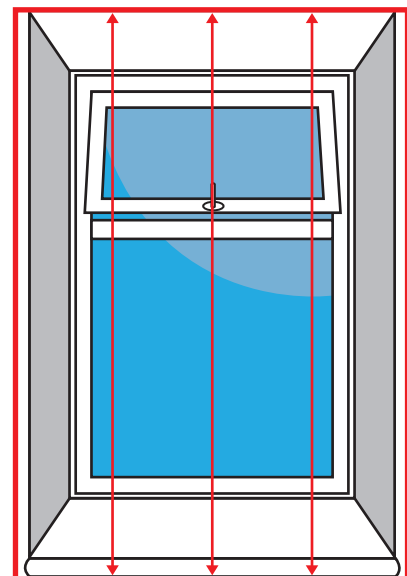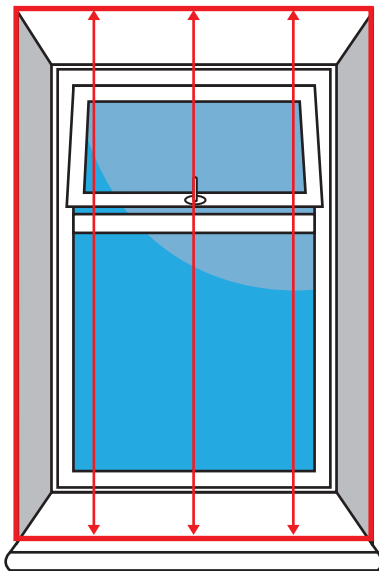

4. **A)** To fit the shutter on the window sill you will need to measure from the top of the sill to the top of the recess.

Take your 3 measurements **Left, Middle and Right** and write these measurements down and then **add 38mm to the biggest measurement** this is to allow for size of the frame at the Top.

(This will be your final measurement for your drop when submitting your order)

- B)** To fit the shutter outside of the window sill you will need measure from the bottom of the sill to the top of the recess.

Take your 3 measurements **Left, Middle and Right** and write these measurements down and then **add 76mm to the biggest measurement** this is to allow for the size of the frame at the Top and Bottom.

(This will be your final measurement for your drop when submitting your order)




## Outside Recess Frame

Inward Opening Windows


### Shutter Drop - Midrail:

5. If your shutter drop is **over 1800mm** or you would like a midrail you will need to take a measurement from where the bottom of frame will be to the middle of the midrail point.

(This will be your final measurement for your midrail when submitting your order)

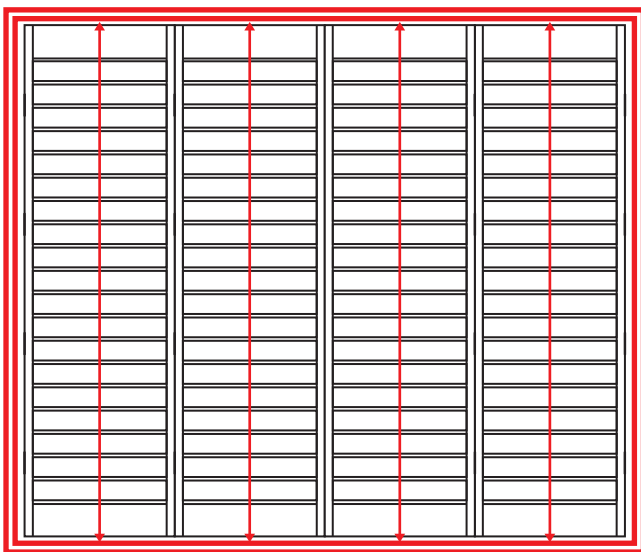

Example without Midrail

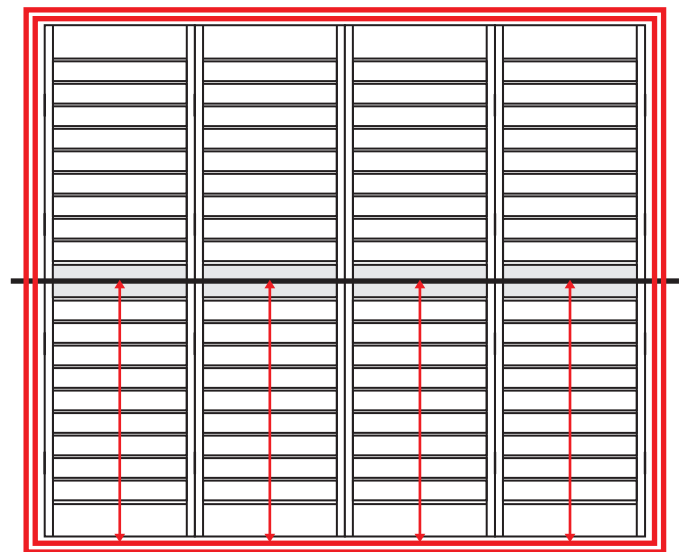

Example of Midrail



We recommend keeping the midrail inline with glazing bars and features of the window.