




Splayed Bay Measuring

1. Start by printing off our frame templates and cutting them out.
*Make sure printer is set to 100%
Place the templates on the window sill where you would like the shutter to be positioned.

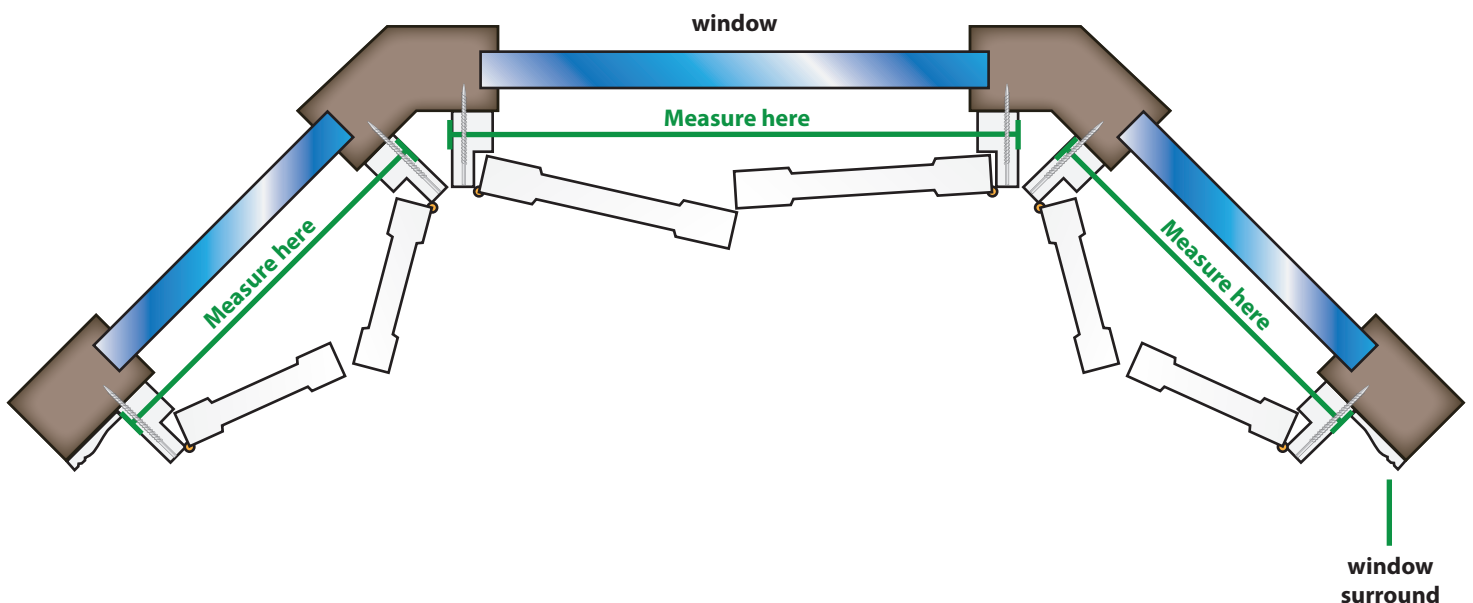

2. Taking into consideration any handles or obstructions measure from the outside of the templates starting from left to right and write these measurements down.


E.g. Left shutter width... 600mm
Middle shutter width... 1200mm
Right shutter width... 600mm

3. We recommend all shutters to be made at the same height as this will help the panels and louvres to line up correctly. We also recommend midrails to be at the same measurements.



Splayed Bay Measuring

4. Measuring for the height - Measure for the window sill to where you would like to top of the frame to finish.
5. Measuring for midrails and tier on tier, measure from the sill to where you would like the centre of the midrail / tier on tier split to be.

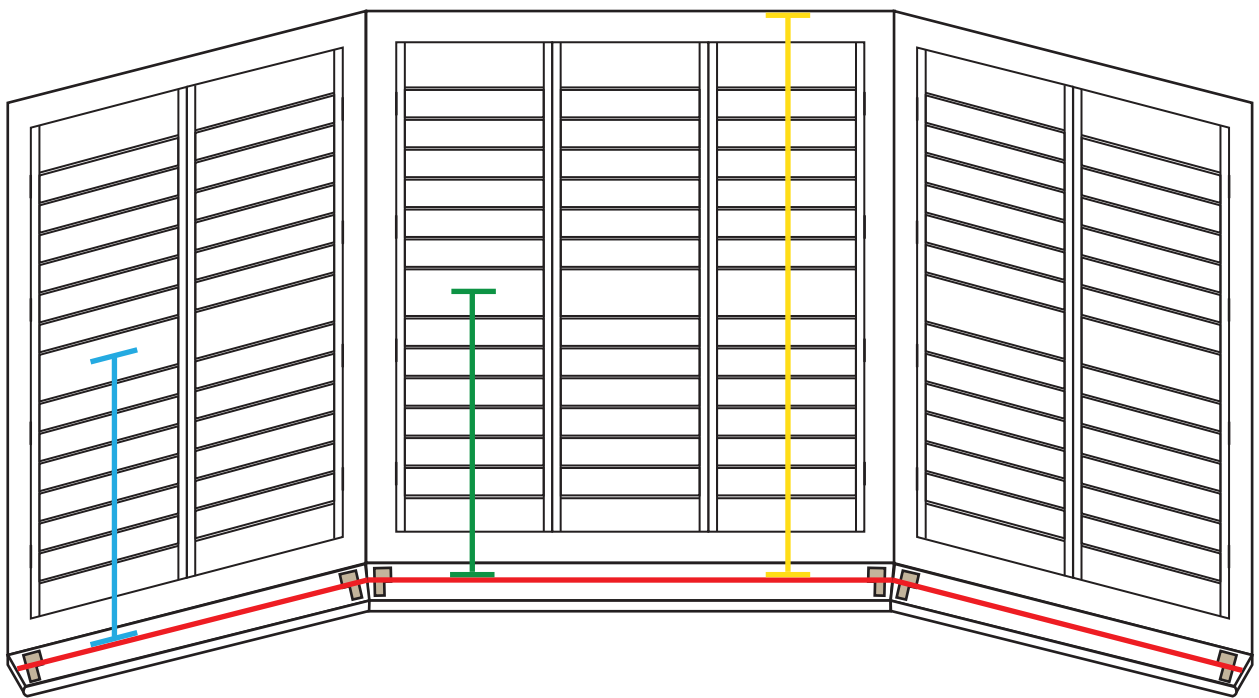

- Red Line:** Width of the shutters **Green Line:** Tier on Tier Split (If applicable)
Blue Line: Midrail Height (If applicable) **Yellow Line:** Height of shutters

6. If the bay window has more than 3 sides, just repeat the steps until all windows are measured.
7. Place your order into our step by step ordering system. For a 3 sided bay you will need to order 3 separate shutters. For a 5 sided bay, you will need to order 5 separate shutters and so on...